



Quick Start Guide – VantagePoint Systems



Pivoting/Angling the Head – The angle of the screen may be changed by loosening/tightening the secure bolts with the provided allen wrench. Do NOT over loosen or remove bolts

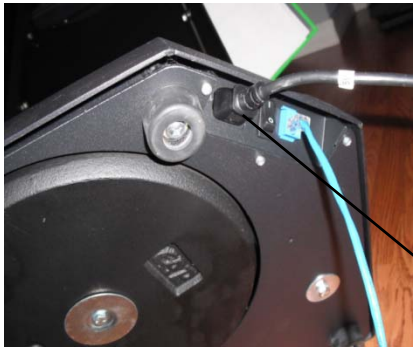

Connecting Power and Network Cables – Connect the female end of the power cord into socket located at the rear bottom of the base. Plug the male end of the power cord into a standard grounded electrical outlet. A standard RJ-45 network connection is also located on the rear bottom of the base.

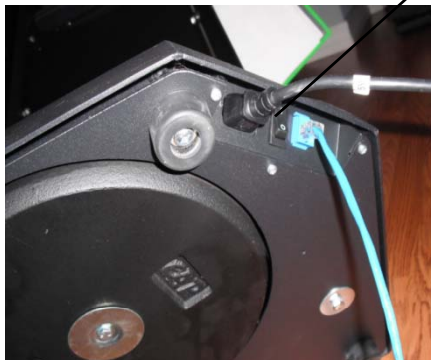

Turning on the kiosk – There is a complete system power switch located on the rear bottom of the base. If PC fails to turn on, see next step.



Accessing the PC –remove rear door with keys provided with the kiosk . Slide top security bracket upwards to access USB ports on PC. Turn on PC by pressing power button.



How to clean touch screens – cont. Be careful that the cleaner does not seep or drip into the system behind the front monitor bezel. Household cleaners such as Isopropyl Alcohol, Windex™ or ammonia-free solutions may be used.



How to clean touch screens - Never spray the cleaner directly onto the screen, as seepage and cloudiness may result. Spray cleaner onto a soft, lint free cloth. Wipe the screen with the cloth.